



REV 1: 13/11/2014

INSTRUCTIONS MULTI - BOOTWIPER BWP-003 to BWP006 BOOTWIPER SOCKETS BWP-008 & BWP009

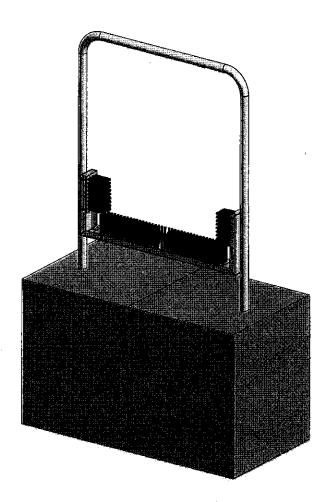


PARTS LISTING

BWP-003 MULTI-1 BWP **ASSY** 795 x 14457mm

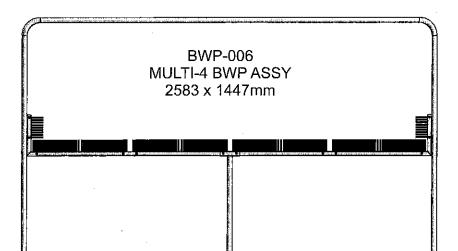

BWP-004 **MULTI-2 BWP ASSY** 1325 x 1447mm

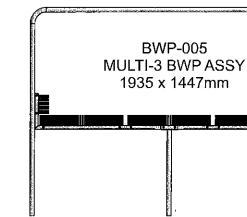





Please note that the brushes are a consumable item and will wear over time. See reference list below for replace.

BWP-005

BWP-003 - Replacement brushes BWP-021 = 610x73x25 x1 - 152x73x25 = 2

BWP-004 - Replacement brushes BWP-022 = 610x73x25 x2 - 152x73x25 = 2

BWP-005 - Replacement brushes BWP-023 = 610x73x25 x3 - 152x73x25 = 2

BWP-006 - Replacement brushes BWP-024 = 610x73x25 x4 - 152x73x25 = 2




BOL781 - 5.5x25 HEX DRILL SCREWS C/W G16 **WASHER**

BWP-008 - DIA 38.1 x 1.5 x 540mm BWP SOCKET x2

BWP-009 - DIA $31.8 \times 1.5 \times$ 540mm BWP SOCKET x3

PEQ444 - MULTI **BWP CENTRE** SUPPORT 600 x 120mm

Multi Bootwiper BWP-003

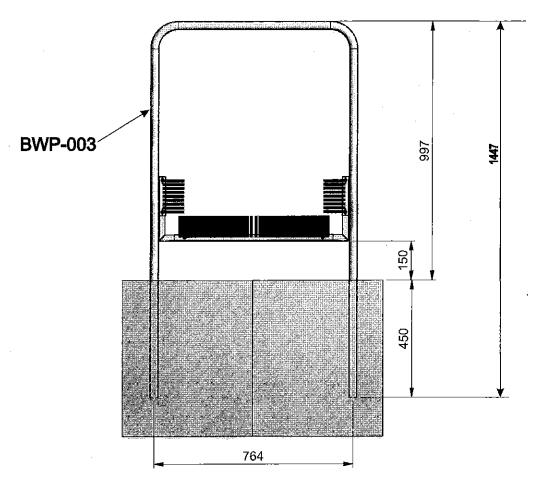

Once you have unpacked your Boot Wiper main frame, find a suitable place to insert your product. Mark out the centre points of your frame, then create a hole 450mm down and concrete into place

Replacing Brushes (BWP-021):

When you have unpacked your replacement brushes, Place the large (610x73x25mm) brush into the channel, using BOL781 screw brushes into place.


Place the small (152x73x25mm) brush into the vertical channel and screw into place with BOL781

MAKE SURE ALL SCREWS ARE FULLY TIGHTENED BEFORE USE

GENERAL MAINTENANCE:

Periodically hose or wash down to get rid of any excess soil. Check screws for tightness and touch up any chips and scratches with paint to stop rust and bubbling of paint. Replace brushes when necessary to keep you boot wiper in full working order.

MULTI BOOTWIPER BWP-004

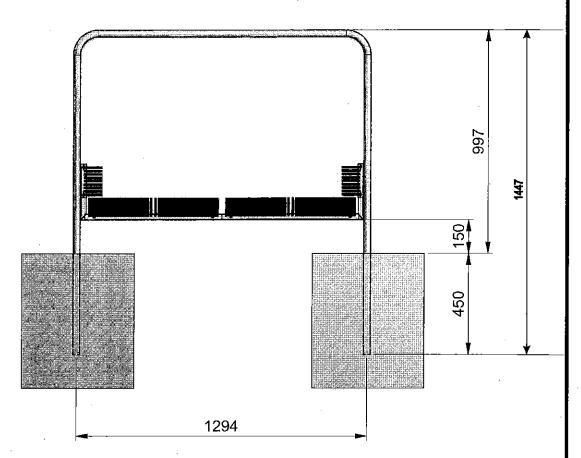

Once you have unpacked your Boot Wiper main frame, find a suitable place to insert your product. Mark out the centre points of your frame, then create a hole 450mm down and concrete into place

Replacing Brushes (BWP-022):

When you have unpacked your replacement brushes, Place the large (610x73x25mm) brush into the channel, using BOL781 screw brushes into place.


Place the small (152x73x25mm) brush into the vertical channel and screw into place with BOL781

MAKE SURE ALL SCREWS ARE FULLY TIGHTENED BEFORE USE

GENERAL MAINTENANCE:

Refer to page 2 of instructions

MULTI BOOTWIPER BWP-005

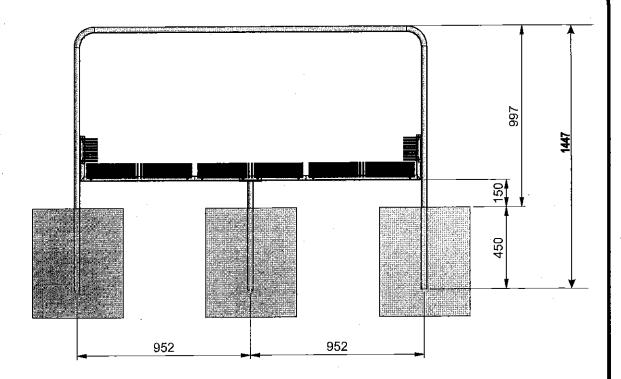

Once you have unpacked your Boot Wiper main frame, find a suitable place to insert your product. Mark out the centre points of your frame, then create a hole 450mm down and concrete into place

Replacing Brushes (BWP-023):

When you have unpacked your replacement brushes, Place the large (610x73x25mm) brush into the channel, using BOL781 screw brushes into place.


Place the small (152x73x25mm) brush into the vertical channel and screw into place with BOL781.

MAKE SURE ALL SCREWS ARE FULLY TIGHTENED BEFORE USE

GENERAL MAINTENANCE:

Refer to page 2 of instructions

MULTI BOOTWIPER BWP-006

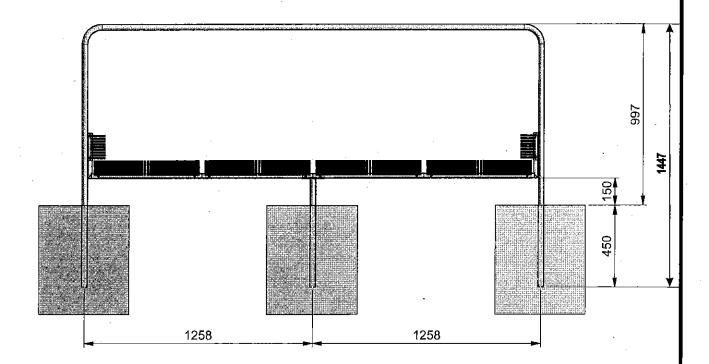

Once you have unpacked your Boot Wiper main frame, find a suitable place to insert your product. Mark out the centre points of your frame, then create a hole 450mm down and concrete into place

Replacing Brushes (BWP-024):

When you have unpacked your replacement brushes, Place the large (610x73x25mm) brush into the channel, using BOL781 screw brushes into place.

Place the small (152x73x25mm) brush into the vertical channel and screw into place with BOL781.

MAKE SURE ALL SCREWS ARE FULLY TIGHTENED BEFORE USE

GENERAL MAINTENANCE:

Refer to page 2 of instructions

