

**Pack Contents**

- |  |          |                                 |          |
|--|----------|---------------------------------|----------|
| 1 1 x Net complete with top poles                                  |          | 6 2 x Plastic Bases             | (PLA606) |
| 2 2 x Base poles   | (PEP687) | 7 2 x Set of Guy ropes (FPK015) | (GUY120) |
| 3 2 x 798mm Centre poles Men (supplied with VOL-150 & VOL160 only) | (PEP688) | 8 1 x Set of 4 Pegs (FPK015)    | (PEG050) |
| 4 2 x 607mm Centre poles Women                                     | (PEP689) | 9 1 x Mallet (FPK015)           | (BOL951) |
| 5 2 x 497mm Centre poles Junior (supplied with VOL160 only)        | (PEP684) | 10 1 x BAG                      |          |

**View of Product**

ITEM 10 - BAG CODES

- VOL-150 - (VOL-151)
- VOL-155 - (VOL-156)
- VOL-160 - (VOL-162)

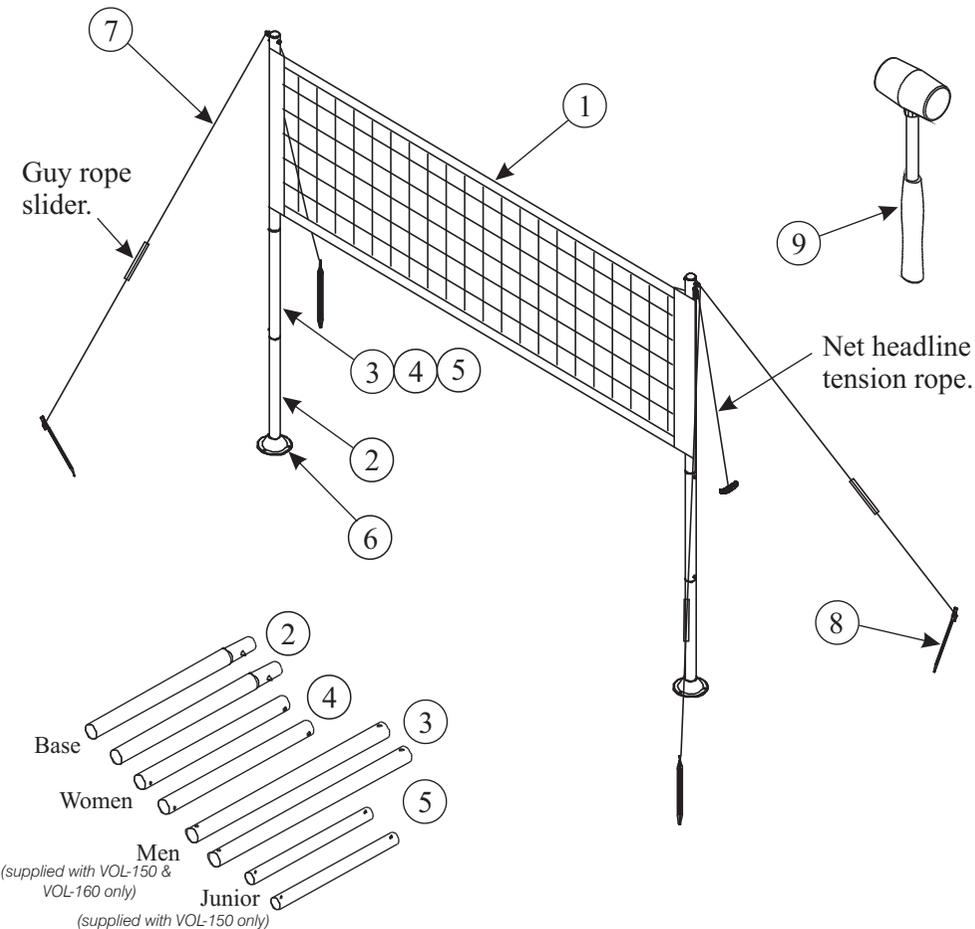


Fig.1

PLEASE READ THESE ASSEMBLY INSTRUCTIONS FULLY BEFORE ASSEMBLING YOUR VOLLEYBALL SET.

10 Bag (not shown)

**Assembly Instructions**

**MANPOWER:** The net can be erected by one person in around 10 minutes, however, a little help will make life easy and reduce the time considerably.

**1** Using the pack contents list and view of product overleaf, identify the parts ready to assemble. Please note that the base poles (part 2) are supplied pre-assembled with womens height centre poles (part 4).

**2** Roll out the net (part 1) across the court, insert plain end of the base poles (part 2) into the plastic bases (part 6) and select the centre sections required (part 3 for Men, part 4 for Women or part 5 for Junior). Clip together the base and centre sections as shown in Figure 2, finally clip the assembly to each top pole.

**3** Position 2 ground pegs (part 8) approximately 2m from each post at 45° as shown in Figure 1, tilt back and drive into the ground leaving the hook exposed for now..

**Note:** If erecting on soft or very loose sand longer pegs may be required.

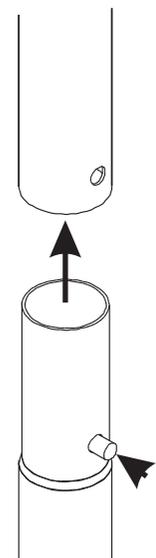


Fig.2

**4** Hook the Guy Ropes (part 7) over the pegs and now drive the pegs in flush to the ground. Hook the ring on the guy ropes to the hook at the top of the posts. **IMPORTANT:-** At this stage make sure the net headline is NOT in the jaws of the cleat.

**5** Tension the guy rope sliders to achieve a good tension on the posts making sure that the posts are vertical.

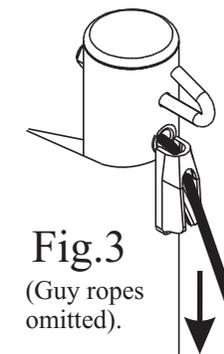


Fig.3  
(Guy ropes omitted).

**6** Check again that the posts are both vertical and achieve final tension by pulling down on the net headline, jam the headline rope into the cleat to lock, as shown in Figure 3. To release the headline rope; pull down slightly and then pull away from the post, this will free the headline rope from the cleat.

Pull down & lock headline rope in cleat.