




## INSTRUCTIONS

BWP-010 - Premier Bolt  
down, BWP-011 - Premier  
Free standing, BWP-013 -  
Premier Socketed  
Bootwipers

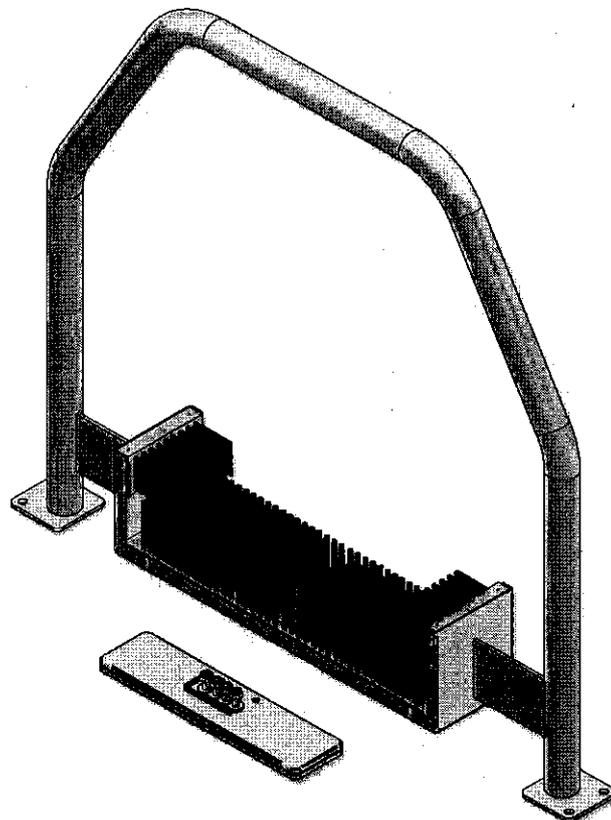





INS657

Revision 3  
13/11/2014

# BWP-010/011 - PARTS LISTINGS

**BWP -010 - PREMIER  
BOLT DOWN BOOT WIPER -  
1 OFF**

**BWP-011 - PREMIER  
FREESTANDING BOOT WIPER -  
1 OFF**

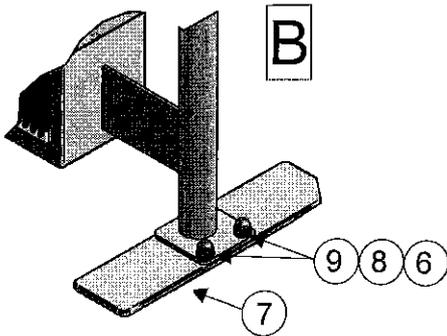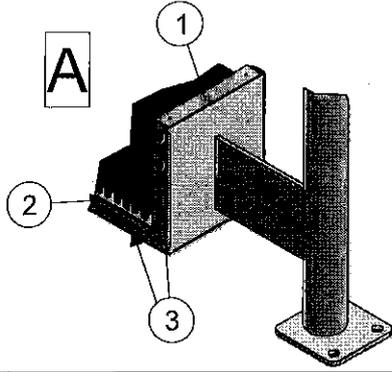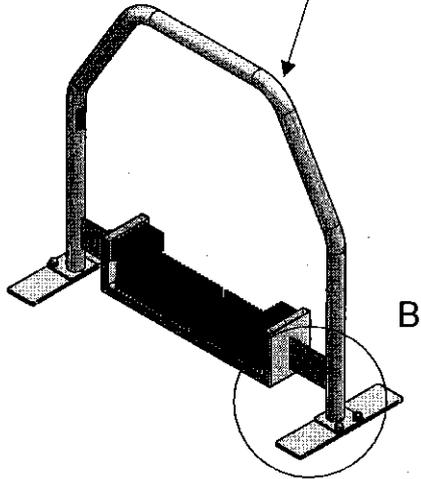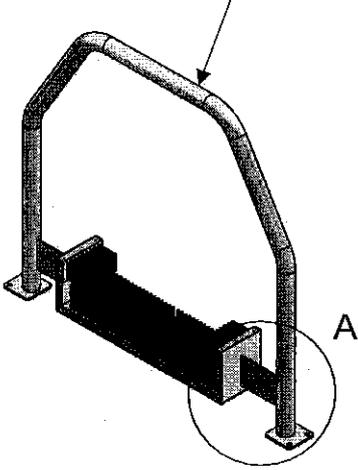


Please Note that the brushes are a consumable item and will wear over time. Replacements are available to purchase, see page 2 for details.

- |  |   |   |
|--|---|---|
| <br><b>1</b> BWP-025 - BWP SMALL BRUSH<br>152x73x25mm - 2 OFF     | <br><b>2</b> BWP-025 - BWP LARGE<br>BRUSH 610x73x25mm - 2 OFF               | <br><b>3</b> BOL781 - 5.5 x 25 HEX<br>DRILL SCREW - 16 OFF |
| <br><b>4</b> BOL791 - 6mm ALLEN<br>KEY - 1 OFF                    | <br><b>5</b> BOL709 - M10 FORM<br>C WASHER S/S - 4 OFF                     |   |
| <br><b>6</b> BOL202 - M10 NYLON NUT<br>BZP - 4 OFF                | <br><b>7</b> PEQ363 - PREMIER FREE STANDING<br>PLATES 400x100x10mm - 2 OFF |   |
| <br><b>8</b> BOL335 - M10x25<br>COUNTER<br>SUNK SCREW S/S - 4 OFF | <br><b>9</b> CAP950<br>M10 NUT CAP - 4 OFF                                 |   |

## Maintenance / Fixing Instructions

BWP-010

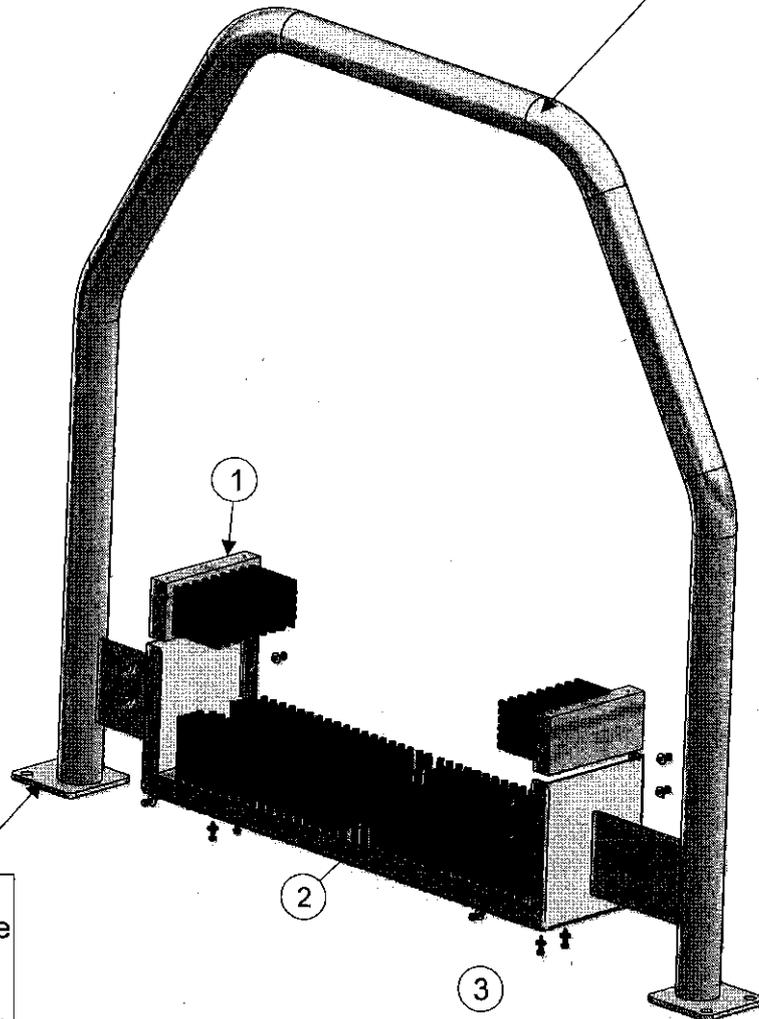

### **FIXING:**

Fix down using appropriate  
Ground fixings

Note: Fittings not supplied

### **Replacing Brushes:**


When you have unpacked your replacement brushes (BWP-025), place the bigger brushes (610x75x25mm) into the channel, and using BOL781 to screw the brushes into place. Place the Boot Wiper onto its side and drill 4 - 3mm pilot holes underneath and screw into place.

Place the smaller brush (152x73x25mm) into the vertical channel and screw into place with BOL781.

### **GENERAL MAINTENANCE:**


Periodically hose or wash down to get rid of any excess soil. Check screws for tightness and touch up any chips and scratches with paint to stop rust and bubbling of paint. Replace brushes when necessary to keep you boot wiper in full

ASSEMBLY & MAINTENANCE INSTRUCTIONS  
FOR BWP-011

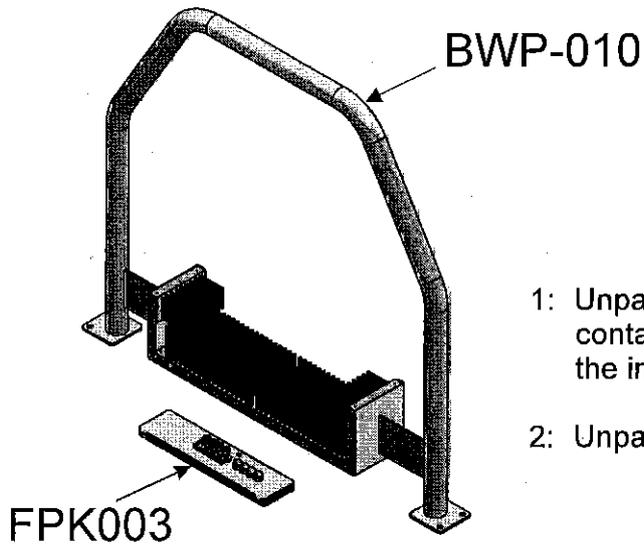


1: Unpack the Fittings Pack (FPK003), which will contain the following parts listed on page 1 of the instructions (items: 5,6,7,8,9).


2: Unpack the main bootwiper frame (BWP-010).

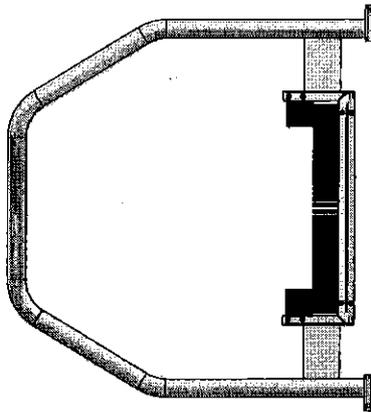

3: Once everything has been unpacked place the bootwiper gently on its side. Using the the packaging to prevent you from scratching/damaging the product.

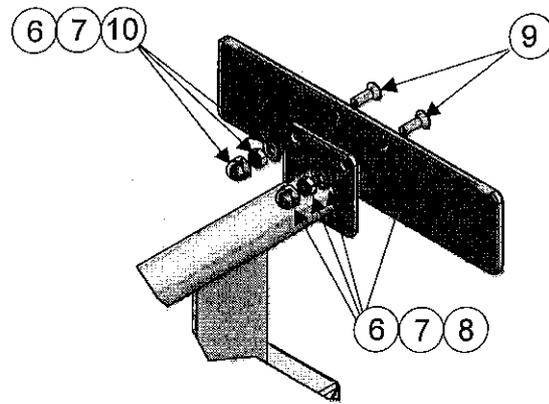


4: Next place 6,7,8,9, together as shown above, using a 17mm spanner and the allen key supplied (item 5).

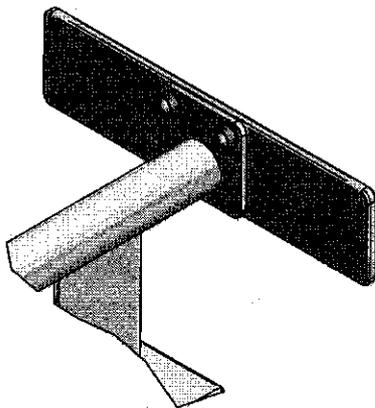

5: Once all the parts are fully tightened up it should look like the picture to the left.

6: Repeat steps 4,5 for the other side.



ASSEMBLY & MAINTENANCE INSTRUCTIONS  
FOR BWP-011

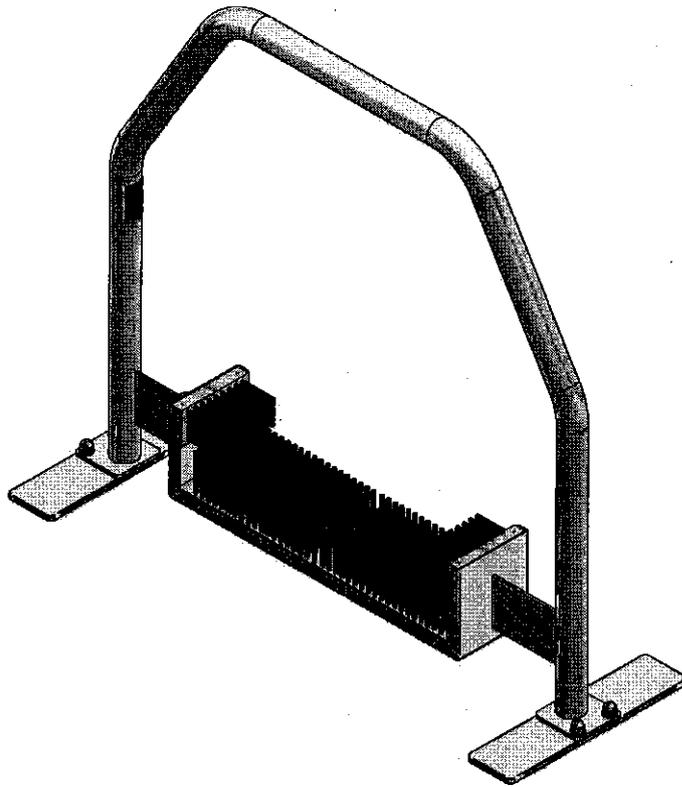

7: Once all the parts have been completely tightened up it should look like the picture above.

8: For General Maintenance & Replacing Brushes see page 2,

## ASSEMBLY & MAINTENANCE INSTRUCTIONS FOR BWP-013

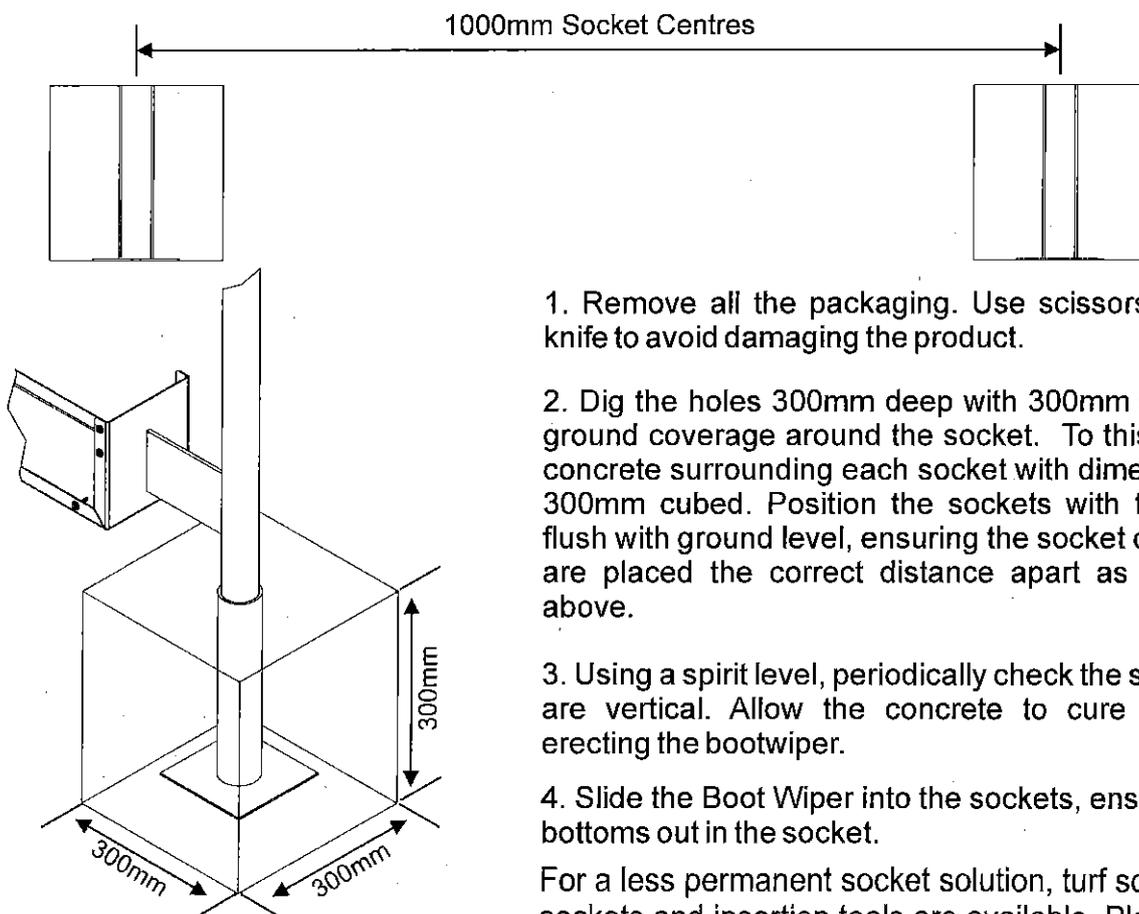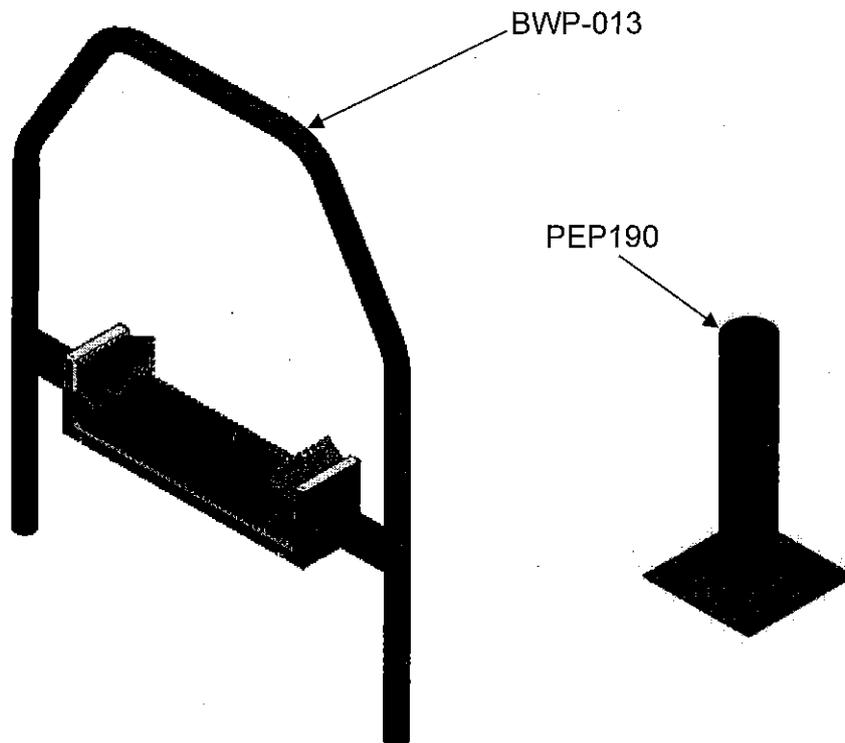

1. Remove all the packaging. Use scissors not a knife to avoid damaging the product.

2. Dig the holes 300mm deep with 300mm square ground coverage around the socket. To this apply concrete surrounding each socket with dimensions 300mm cubed. Position the sockets with the top flush with ground level, ensuring the socket centres are placed the correct distance apart as shown above.

3. Using a spirit level, periodically check the sockets are vertical. Allow the concrete to cure before erecting the bootwiper.

4. Slide the Boot Wiper into the sockets, ensuring it bottoms out in the socket.

For a less permanent socket solution, turf screw sockets and insertion tools are available. Please contact your supplier and quote part numbers BAR-030 & BAR-031