



View of Product

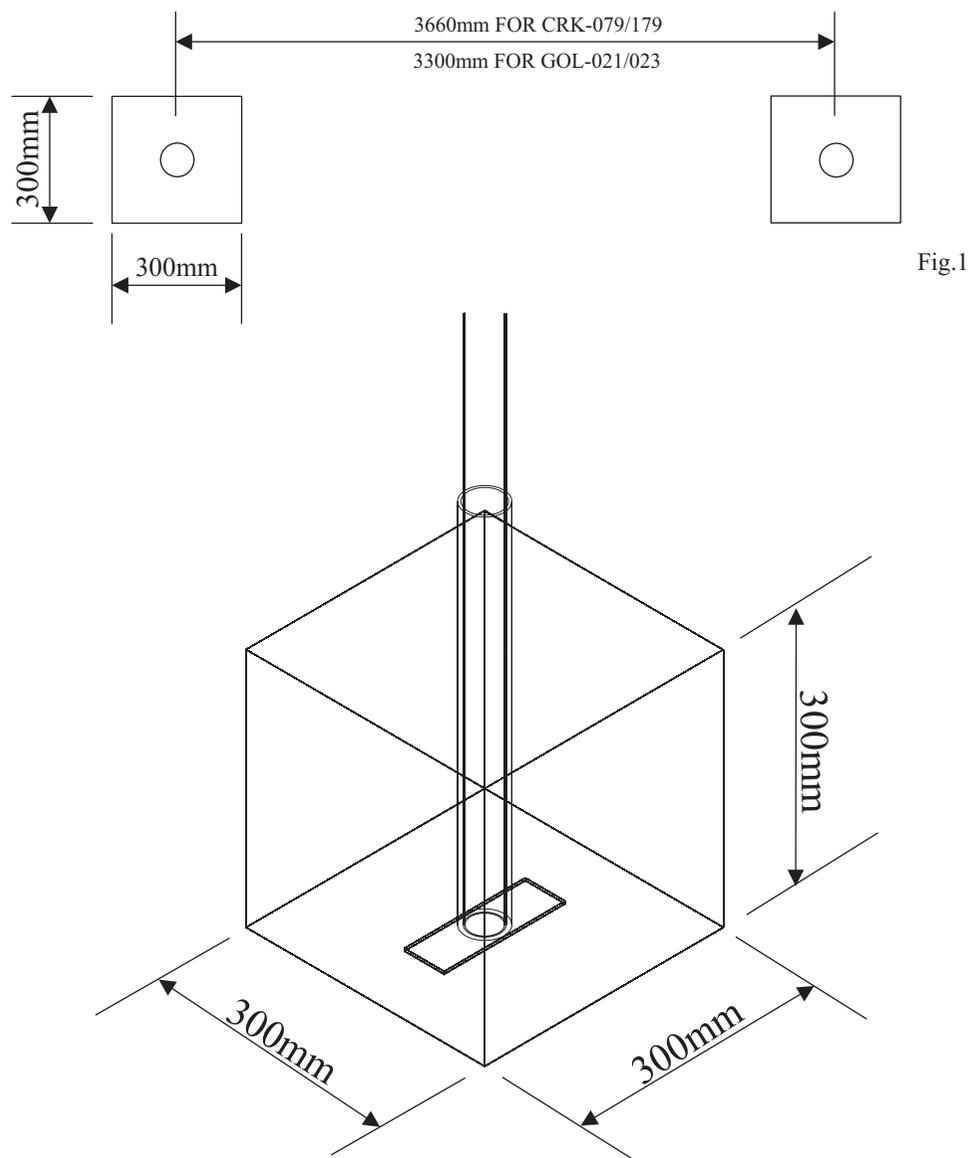

Socket installation

- 1 Dig the holes 450mm deep with 300mm square ground coverage around the socket. To this apply concrete surrounding each socket with dimensions 300mm cubed. Position the sockets with the top flush with ground level.
- 2 Finish the concrete at least 150mm below ground level to allow for soil and turf.
- 3 Using a spirit level, periodically check that the sockets are vertical. Allow the concrete to cure before assembling the rest of the cricket cage.

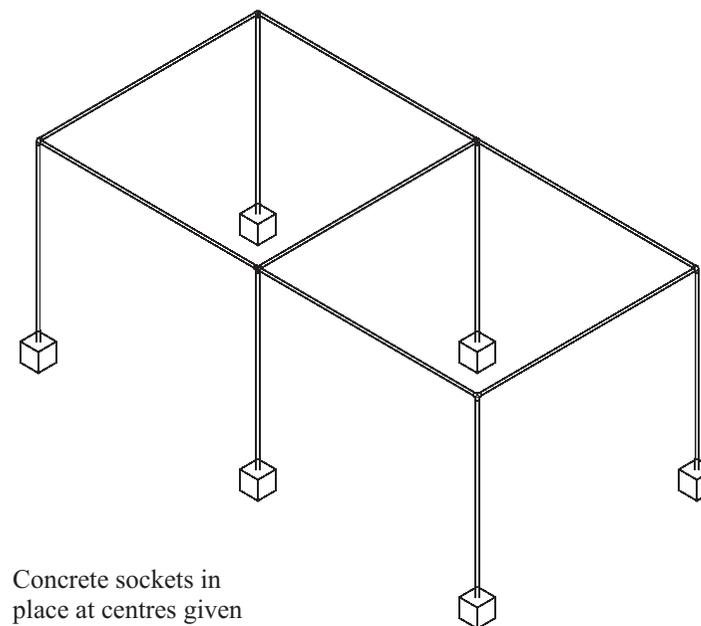

Concrete sockets in place at centres given in Fig. 1.