

Pack Contents

VOL-046

- 1. 1 x Floor Fixed VB1 Volleyball Base (Pair) (FEP033)
- 2. 1 x VB1 Upright (Pair) (FEQ920)

VOL-047

- 5. 1 x Floor Fixed VB1 Volleyball Base (Pair) (FEP032)
- 6. 1 x VB4 Upright (Pair) (FEQ930)


(ITEMS BELOW ARE PACKED IN BASES WITHIN FPK046) (ITEMS BELOW ARE PACKED WITHIN FPK046)

- 3. 4 x M12x30mm Button Head Socket Screw (BOL142)
- 4. 4 x Large Washer (BOL702)

Optional Extras

- 7. 4 x Standard SH2 Ground Sockets For Solid Floors (ASY001+BOL855)
- 8. 4 x Long SH2 Ground Sockets For Sprung Floors (ASY002+BOL855)

Please read instructions before you begin to assemble your volleyball posts.

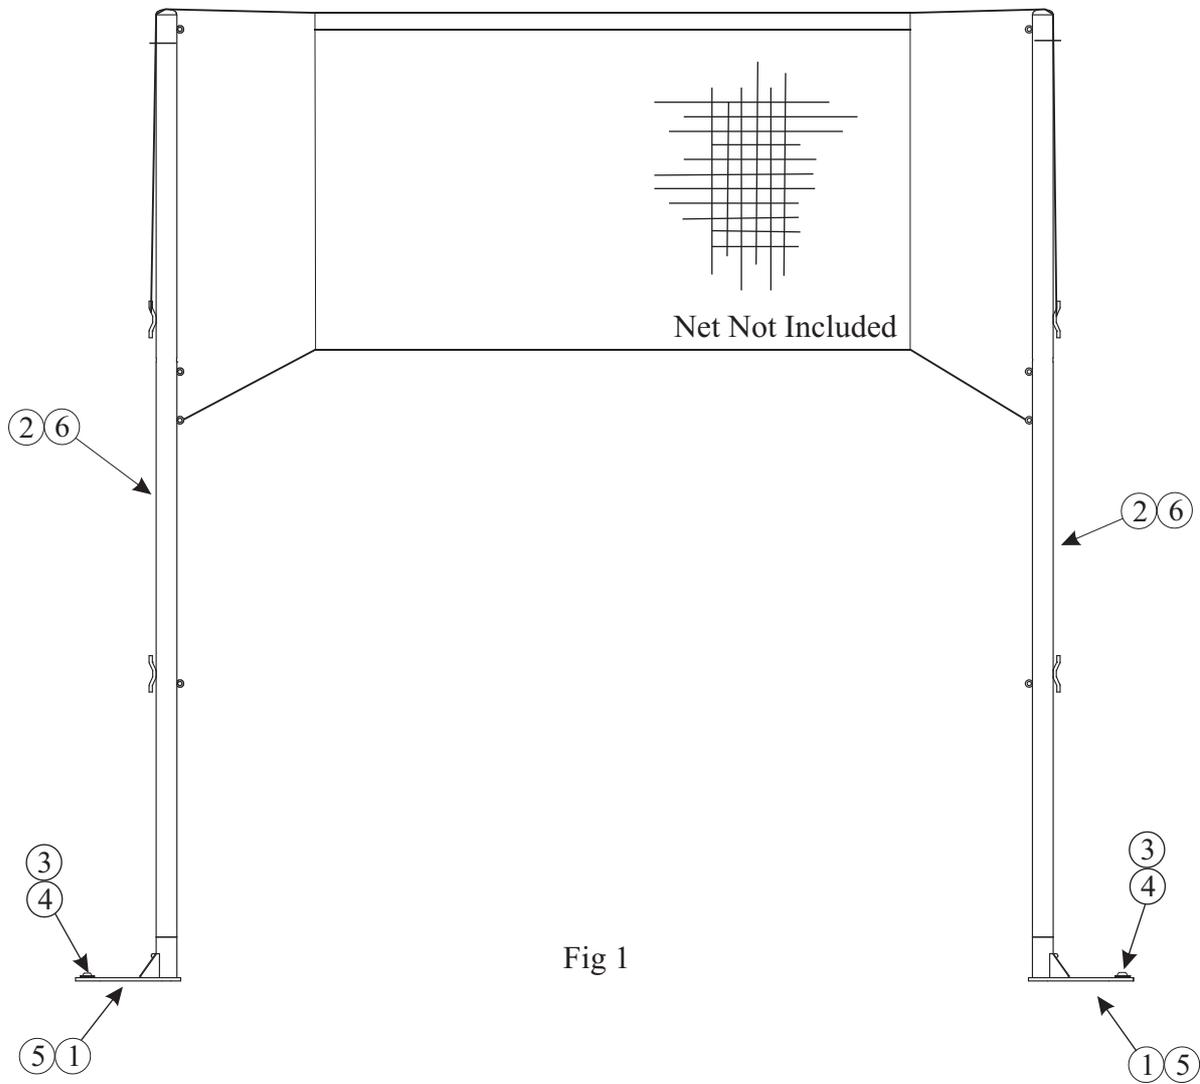

Socket Installation Dimensions



Fig 2

Code: VOL-046/047

Product: Floor Fixed Volleyball Posts

Assembly Instructions

SH2 Socket Installation (Optional Extra):

The sockets should be installed by a specialist, using the following guidelines, please contact your distributor for recommended specialist fitting engineers.

Mark at location shown in Fig 2. Drill Ø20mm holes 160mm deep from floor level for standard SH2 sockets for solid floors or 210mm deep for longer SH2 socket for sprung floors.

Post Assembly

- 1** Using the pack contents list overleaf, identify the parts required to assemble the volleyball Posts purchased.
- 2** Using the M12 Button Head Screw (3) and Washer (4), anchor the base of the volleyball posts to the ground securing with an Allen Key.
- 3** Insert the post into the spigot on the base push the button clip in and locate in the hole on the spigot until the clip engages and fully emerges through.
Please note; upright is universal, spring clip may need relocating in opposite side of upright in order to orientate the upright correctly in the base.