

Pack Contents: FBL-179**Frame Components**

1. 1 x Crossbar (pair) (FEQ348)
2. 2 x Side Frame (pair) (FEQ106)
3. 2 x Uprights (pair) (FEQ115)

Net Hooks (packed with crossbars)

3. 60 x Euro 2002 Net Hooks. (HKS029)

Socket Components

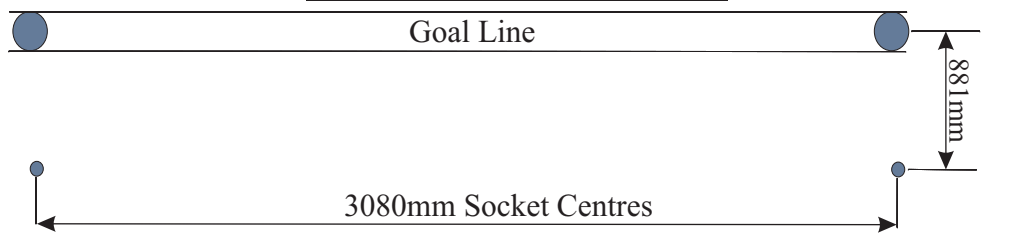
5. 4 x 'T' Bolts (PEQ977)

Assembly Requirements

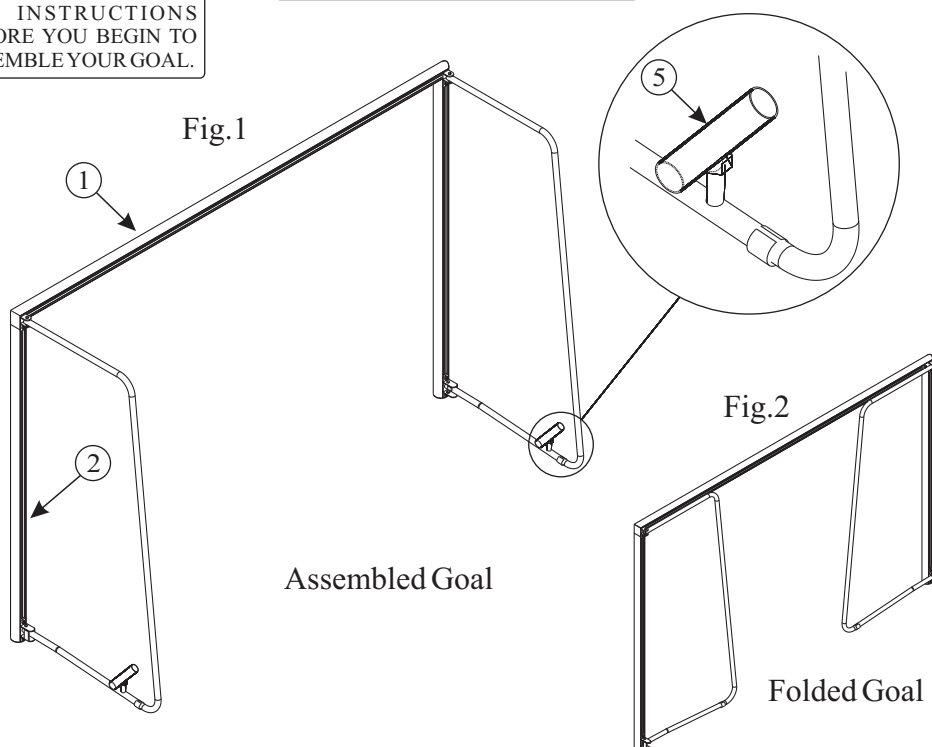
Number of People: 2
Time to Assemble: 10 minutes
Tools Needed: 1x17mm Spanner

Optional Extras.

4. 4 x SH2 Anchor Sockets (ASY001)
4. 4 x M12 Rambolt Shield (BOL855)

Socket Installation Dimensions**View of Assembled Goal**

PLEASE READ ALL OF THE INSTRUCTIONS BEFORE YOU BEGIN TO ASSEMBLE YOUR GOAL.

**Assembly Instructions:****Assembly**

Unpack and identify all of the components. The sideframes arrive in two bundles consisting of net supports and uprights. You will need to loosen/remove the bolts from the brackets before fitting the crossbar.

Please note: It is important to assemble the goal correctly so that the sideframes fold inwards. The sideframes are handed so you will find that these can only fit onto the crossbar/uprights in one way (as shown in Fig.3)

Lay the crossbar onto the ground and in turn slide each upright onto the crossbar plate being careful to line the square headed bolt up with the crossbar slot. When the corner joint has been neatly formed tighten up the nut.

Folding The Goal

To fold the goal press down on the sideframe with your foot and fold until the side frame tube locks in place. This must be done by 2 people.

Fitting The Net

On the crossbar and upright edges attach the net hooks to the net approx 250mm apart, pull the net up and over the sideframes, then insert the hook into the slot on the goal section and twist to lock. Fix the bottom edges of the net to the sideframes.

Anchoring The Goal

Position goal with hole in side frames directly over anchor sockets and secure with 'T' bolts.

